

PLAYNOTE MULTIMEDIACARD REPLACEMENT

DIRECTIONS:

TURN OFF POWER NEVER remove or insert a MULTIMEDIACARD with the power on !!!

TOOLS NEEDED: none

The MULTIMEDIACARD is located on the MP3 player that is stacked on top the PLAYNOTE Board

The MULTIMEDIACARD looks like this

The MULTIMEDIACARD only slides in and out

After replacement make sure the card is seated in the slot and is not loose

TURN ON POWER

You will always hear a "click" or "pop" sound followed by some audible sound

If no "click" or "pop" sound is heard in the speaker after the power is first turned on, then turn the power off again and wait 5 seconds before turning on again. Again listen for the "click" or "pop" sound.

The next thing that usually happens is an audible sound such as a "bicycle bell" or "ok". This lets you know that the system is happy and is ready to go.

