

## **PLAYNOTE™ OPERATIONAL MANUAL**

THE OPERATION OF THE PLAYNOTE™ UNIT CONSISTS OF A PLAYNOTE™ PNMP3R BOARD, SENSOR(S) , SPEAKER, AND A 15 VOLT, 60W, 4 AMP, PLUG-IN WALL MOUNTED TRANSFORMER.

THIS DEVICE IS A MP3 DIGITAL AUDIO SOUND DEVICE COMPLETE WITH AN ON BOARD 12VDC POWER SUPPLY ALONG WITH AN AMPLIFIER. THE SOUNDS ARE ACTIVATED BY SENSOR(S), THAT SEND A PULSE TO THE SOUND MODULE LOCATED ON THE PNMP3R BOARD, WHICH IN TURN SENDS THE SOUND TO THE SPEAKER. EACH TIME YOU ACTIVATE THE SENSOR(S) THE SOUND BITE WILL PLAY AND AUTOMATICALLY SELECT THE NEXT SOUND ON THE SOUND MODULE.

THE PNMP3R BOARD HAS AN ADJUSTABLE VOLUME CONTROL ON THE TOP RIGHT SIDE LABELED: **VOL** A CLOCKWISE TURN INCREASES THE VOLUME.

THE PNMP3R BOARD ALSO HAS AN LIGHT TO LET YOU KNOW THAT THE POWER IS ON.

THE SOUND MODULE IS LOCATED ON THE TOP BOARD LABELED MP3. THE SOUND MODULE IS THE BLACK CARD LOOKING DEVICE APPROX.: 1" WIDE BY 1 1/4" LONG. THIS DEVICE SLIDES IN AND OUT , **DO NOT REMOVE WITH POWER ON.** THE SOUND MODULE CONSIST OF SOUND BYTES THAT CAN BE 32 MINUTES LONG, THAT ARE RE-RECORDABLE.

**TO RESET: TURN THE BREAKER OFF, WAIT 5 SECONDS AND TURN BACK ON.**

THE SENSOR(S) AVAILABLE ARE:

- AS - ACCELEROMETER SENSOR
- BS - BALL SENSOR
- IR - INFRARED SENSOR
- MS - MOTION SENSOR
- PBS - PUSH BUTTON SENSOR
- PS - PICK SENSOR
- TS - TOUCH SENSOR
- VS - VIBRATION SENSOR

THE SPEAKERS ARE KLH AUDIO SPEAKERS, WEATHER RESISTANT, 3 WAY WITH IMPEDANCE OF 4-6 OHMS AVERAGE

PNOPERTIONMANUAL.DOC